

NEUSPEED®

ENGINE TORQUE DAMPER

2002 – 05 AUDI A4(B6) QUATTRO AND FRONT WHEEL DRIVE

PART # 22.02.43

INSTALLATION INSTRUCTIONS

PART LIST: 1 – URETHANE ISOLATOR

TOOLS REQ: 1 – RATCHET
1 – 13mm SOCKET

1 – 6mm HEX DRIVER
1 – TORQUE WRENCH

1. Raise vehicle and support with jack stands or lift.



3. Remove three (3) bolts (6mm Hex driver) securing torque arm to oil sump.



2. Remove diffuser by removing three (3) front, three (3) rear, two (2) left and two (2) right side fasteners.



4. Remove torque arm from mount




5. Remove three (3) nuts (13mm hex) securing mount to cross member and remove mount from vehicle.



8. Install isolator into mount and re-position assembly for installation.



6. Separate isolator from torque arm by placing isolator on edge of stable surface and pull/push down to remove arm.

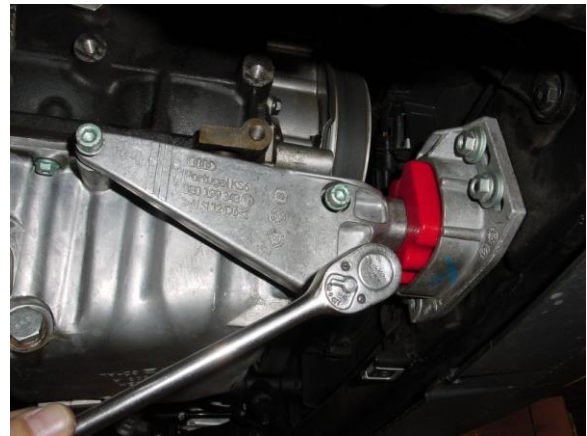

9. Install all fasteners by hand, then torque fasteners securing lever arm to oil sump to 20 Nm (15 ft-lb).



7. Place urethane isolator on stable surface and press torque arm into mount in orientation shown.



10. Position mount flush against cross-member and torque fasteners to 20 Nm (15 ft-lb).

11. Re-install diffuser.

12. Test-drive carefully.