



CARBON FIBER FRONT LIP SPOILER – NM.958855

2008–10 [R55] MINI Cooper S Clubman & JCW (without JCW Aero Kit)

2007–10 [R56] MINI Cooper S Hardtop & JCW (without JCW Aero Kit)

2009–10 [R57] MINI Cooper S Convertible & JCW (without JCW Aero Kit)

PARTS INCLUDED:


[1] NM Carbon Lip Spoiler [9] M6 Lock Nuts
[9] M6x16mm Screws [18] M6 Washers

TOOLS & SUPPLIES REQUIRED:

[1] Masking/Painters Tape [1] Electric Drill [1] 4mm Hex Key Wrench [1] Flat Screw Driver
[2] Clamps (optional) [1] 1/4" Drill Bit [1] 10mm Wrench [1] Phillip Screw Driver




1. On bottom side of front bumper cap remove the five plastic fasteners.

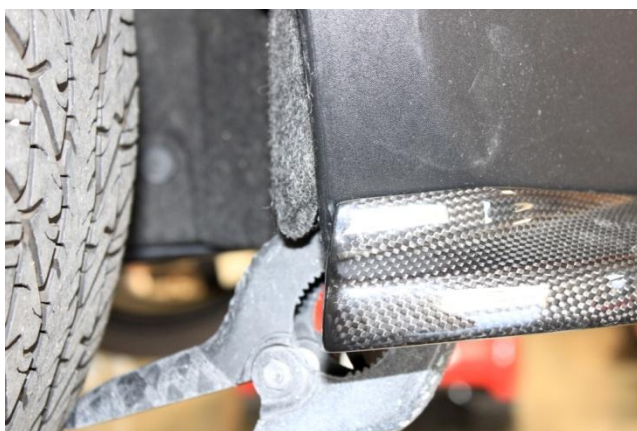

2. Position and align Lip Spoiler on bumper making sure the two surfaces are seated properly securing with tape or clamps or both.



3. Mark the lower bumper for the (9) mounting holes using the Lip Spoiler as template.

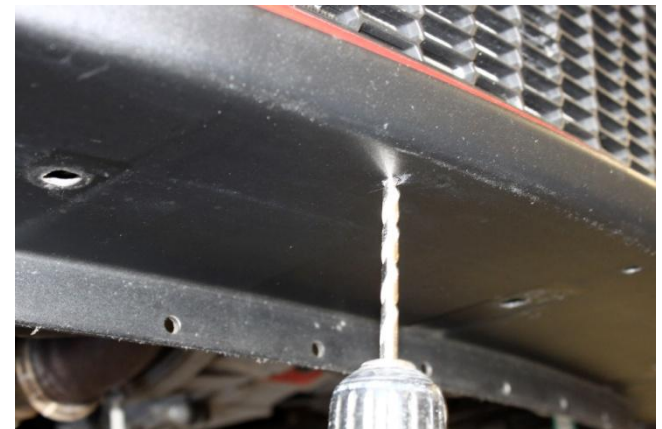

4. Remove Lip Spoiler and proceed to drilling using 1/4" bit.



5. Secure Lip Spoiler using the supplied hardware using 4mm Hex Key wrench and 10mm wrench. Pull down factory lower valance to gain more clearance for inserting nut and washer. Do not over tighten since it will cause damage to carbon fiber surface.

6. Reinstall underside bumper cap fasteners.

©2011 NM Engineering, a division of Automotive Performance Systems, Inc.
All rights reserved. Reproduction in whole or in part is prohibited.
DOC. NM.958855 Rev. 11.09.11

