



CARBON FIBER REAR SPOILER EXTENSION – NM.958857

[R56] MINI Cooper Hardtop ALL & JCW 2007-12

PARTS INCLUDED:

[1] Carbon Fiber Rear Spoiler Extension

TOOLS REQUIRED:


[1] Cleaning Solvent or Degreaser

[1] Soft Towel

1. Using a soft towel, clean factory rear spoiler with paint cleaning solvent or degreaser.




2. Test fit NM Rear Spoiler Extension to vehicle before removing double-sided tape backing. Note: Front lip hooks onto factory spoiler first.

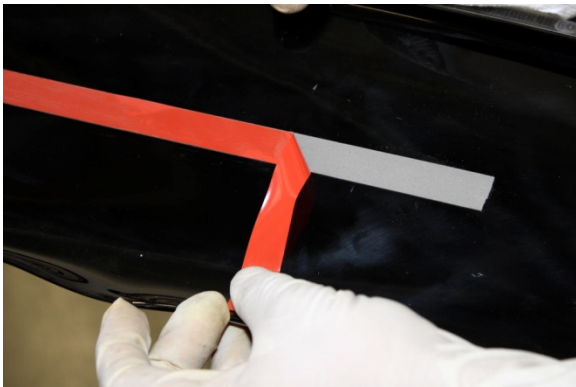

3. When ready to install, pull off tape backing.



4. Center NM Spoiler Extension to factory spoiler, then hook-on front lip. Note: Do not let tape touch factory spoiler while doing this step.

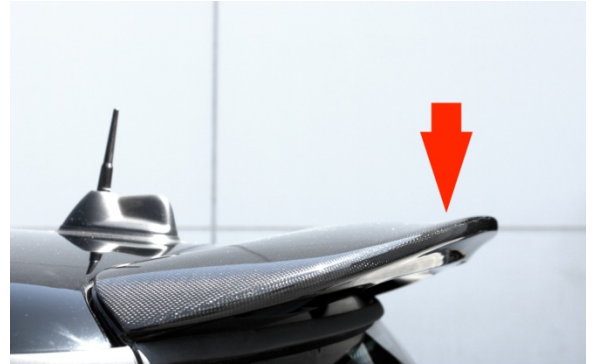

5. Now push down rear section until snaps in place.



6. Then push down outside ends.

©2012 NM Engineering, a division of Automotive Performance Systems, Inc.
All rights reserved. Reproduction in whole or in part is prohibited.
DOC. NM.958857 Rev. 05.28.12