

REAR MUFFLER EXHAUST OR RACE Y PIPE

2012-14 Fiat 500 Abarth
PART # NF.3001 / NF.3000

INSTALLATION INSTRUCTIONS

PART LIST: 1 - Rear Exhaust Section
1 - Pipe Adapter w/ Band Clamp

1 - Pre-Pipe
2 - V Band Clamps


TOOLS REQUIRED: 1 - 15mm Socket
1 - WD-40 or Equivalent
1 - Anti-Seize Compound

1 - 11mm Deep Socket
1 - Contact Cleaner or Equivalent

1. Park car on a flat, level surface capable of supporting the vehicle's weight on jack and jack stands. Using the manufacturer's recommended lifting point(s), raise rear of vehicle and support with jack stands. **NEVER WORK ON A VEHICLE SUPPORTED ONLY WITH A JACK!**
2. Spray WD-40 or equivalent on exhaust clamp bolt threads just in front of rear axle beam and rear exhaust hanger pins to ease removal.




3. Unbolt exhaust clamp and pry off rubber exhaust hangers from rear "Y" pipe section.

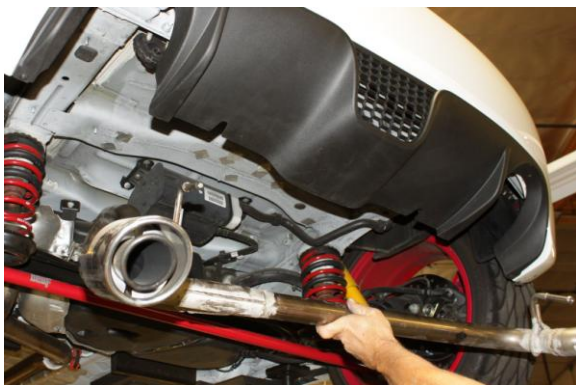

4. Separate "Y" pipe at slip fit and remove from vehicle.




5. Install supplied adapter and band clamp to original middle pipe. Do not tighten at this time. **NOTE:** Do not use adapter if installing NEUF Cat Back Front Pipe.

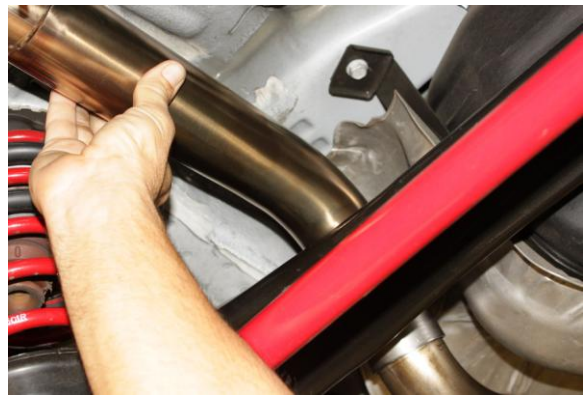

6. Loosely install pre-pipe to adapter with supplied "V" band clamp. Use anti-seize compound on "V" band clamp threads.



7. Install rear section and loosely attach to pre-pipe with supplied "V" band clamp. Use anti-seize compound on "V" band clamp threads.

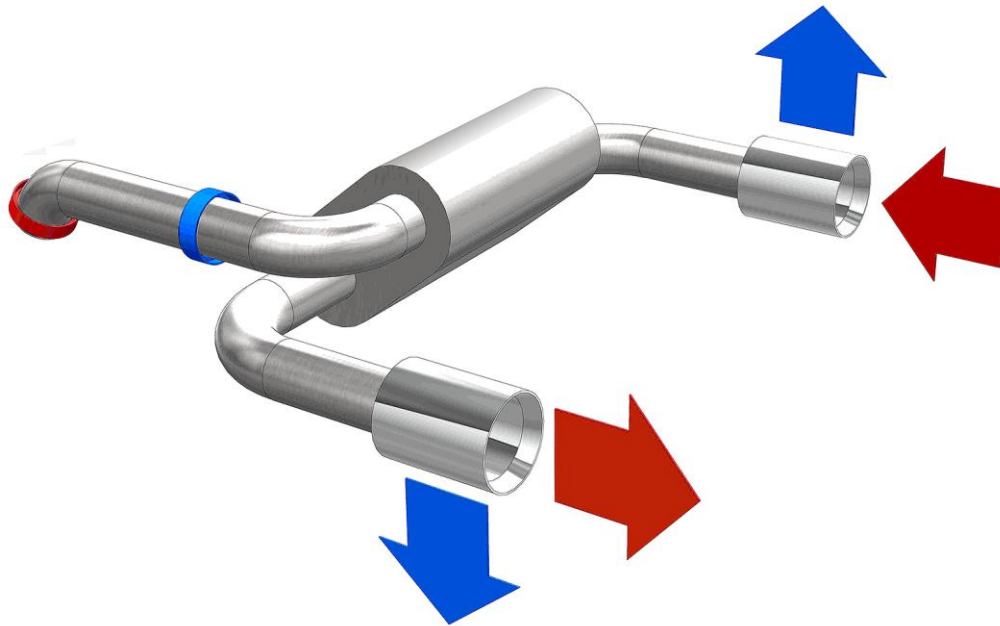

8. Adjust positioning of tips thru valance opening; forward V band clamp (red) adjusts the in and out of the tips. The rear most V band clamp (blue) adjusts the up and down of the tips, now tighten all clamps and adjust as necessary.



9. Double check installation. To prevent burned-on oil stains wipe off all oils and finger prints from new exhaust system with Contact Cleaner and a clean towel before starting engine.

©Copyright 2013 NEUSPEED® All rights reserved. Reproduction in whole or in part prohibited.
DOC.NF.3001 Rev. 11.15.2013